

# SafestCellPhone SCP1000 Manual

## Desktop Computer

Attach the “SafestCellPhone” SCP1000 with 2 cable-zipties, twisties, thread using the openings onto the top of the “SafestCellPhone” SCP1000 card as fixpoints onto the AC power cable, just before it enters the computer housing.



## Notebooks - Laptops

### Option 1

If operating your device WITH an AC power cable - attach the “SafestCellPhone” SCP1000 with 2 cable-zipties, twisties, thread onto the power supply cable, just before it enters the laptop housing, using the 2 openings on the top of the “SafestCellPhone” SCP1000 card as fixpoints.



### Option 2

If operating your device on battery WITHOUT an AC power source - you should position the “SafestCellPhone” card on your device between the keyboard and screen.

!! Attention !! – you may damage your computer as well as the “SafestCellPhone” SCP1000 card by closing the screen before removing the “SafestCellPhone” SCP1000 card !



## WiFi

Attach the “SafestCellPhone” SCP1000 card with 2 cableties, twisties, thread, using the 2 openings on the top of the “SafestCellPhone” card as fixpoints to the power cable as close as possible to the WiFi box itself. Once the “SafestCellPhone” SCP1000 card is attached to the WiFi box all connected computers and devices, wireless or hardwired will be handled by the “SafestCellPhone” card.



## Cordless Phone

Attach the “SafestCellPhone” SCP1000 with 2 cable-zipties, twisties, thread using the openings onto the top of the “SafestCellPhone” SCP1000 card as fixpoints onto the electrical input next to the housing of the base station of the cordless phone (same like shown in the image for the WiFi above), just before it enters the computer housing. Every cordless phone connected to the base station is handled.